





Spare parts list Part description Label No. Drawing Qty 阁 Column 4 A' 1 B1 Beam (Left) 1 B2 Beam(Right) Front and rear 2 C beams [[1 D Middle beam 3x3=44 3x4=60 Flap Е 4x4=60 Column bottom F 4 plate Column cover G 4 plate Connectors for Н 2 middle beams 2 Ι Hinge ring S 2 J Hand crank


Label No.	Part description	Drawing	Qty
K1	Countersunk head screw	M6x16	40+2
K 2	Pan head screw	M6x16	20+2
K 3	Flat washer	D6x12	8+2
K4	Screw+nut	M4x25	2
L	Woodworking screw+ plastic expansion pipe +Flat washer	M8x80 φ10x50 φ8	16
М	Glass glue		1
N	Plastic jam		3x3=88 3x4=120 4x4=120
0	Corner support		8
K5	Self-drilling screw ST 4.2x25	ST4.2x25	32
Q	drainage joint		4

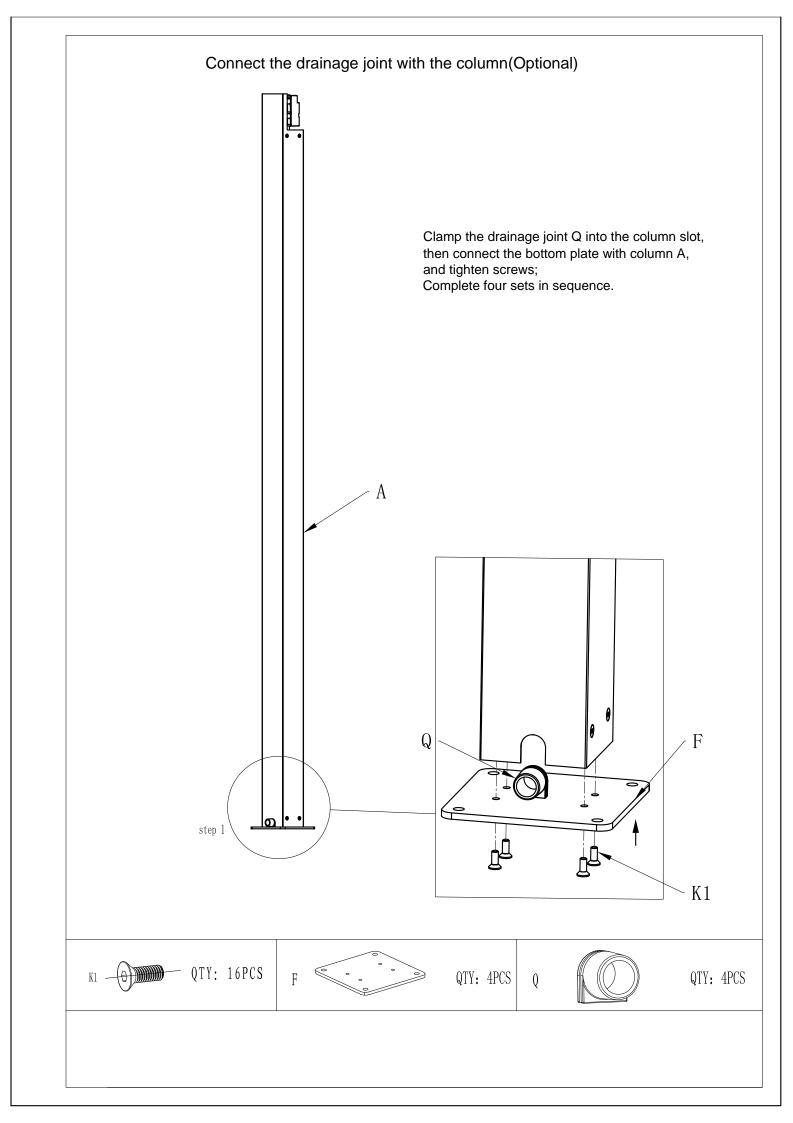


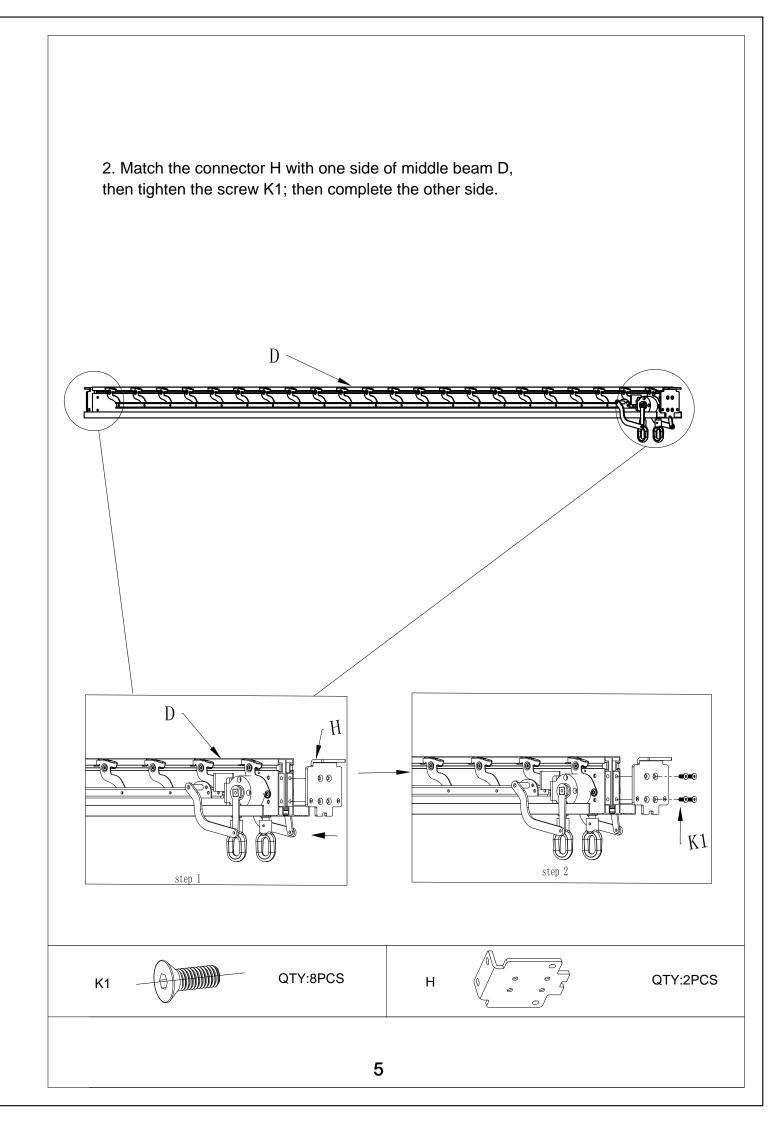


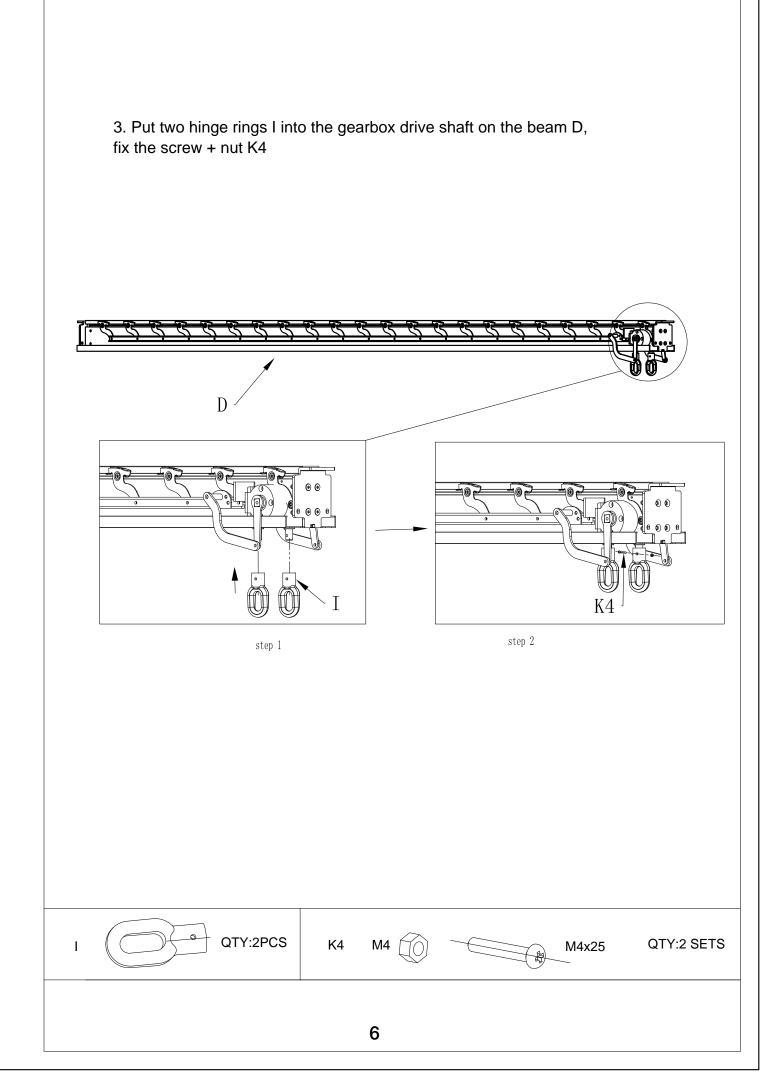


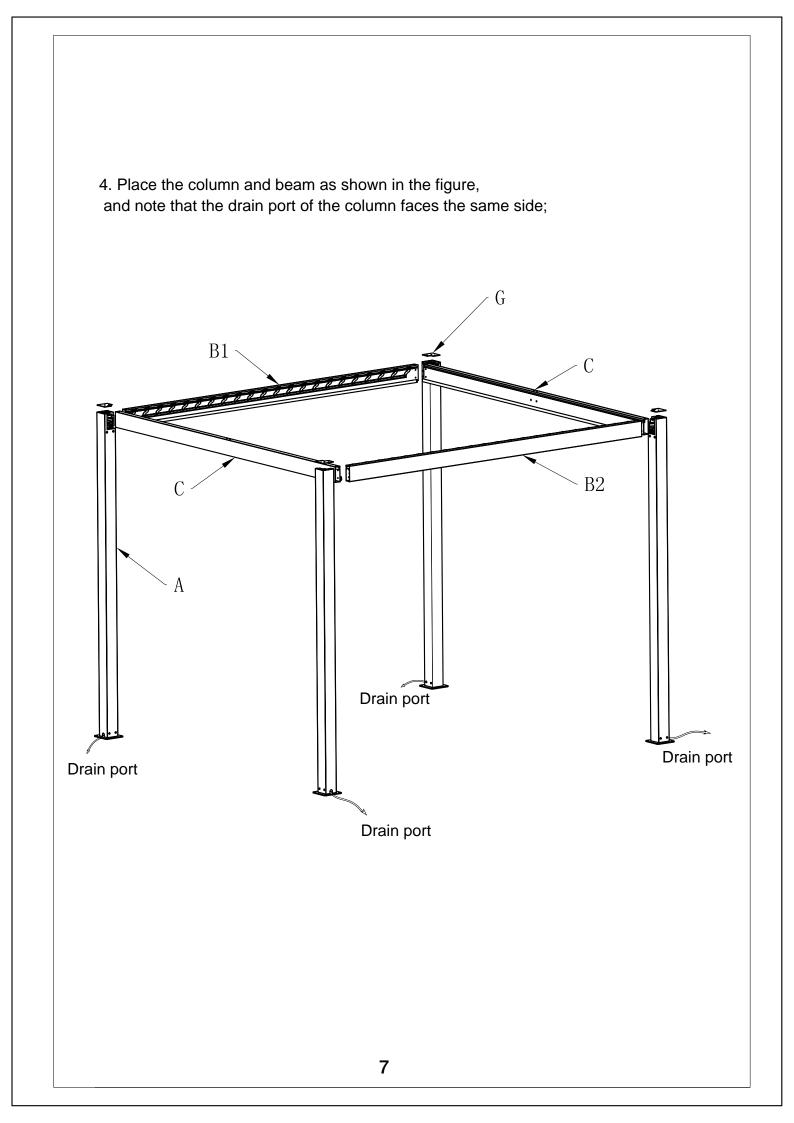


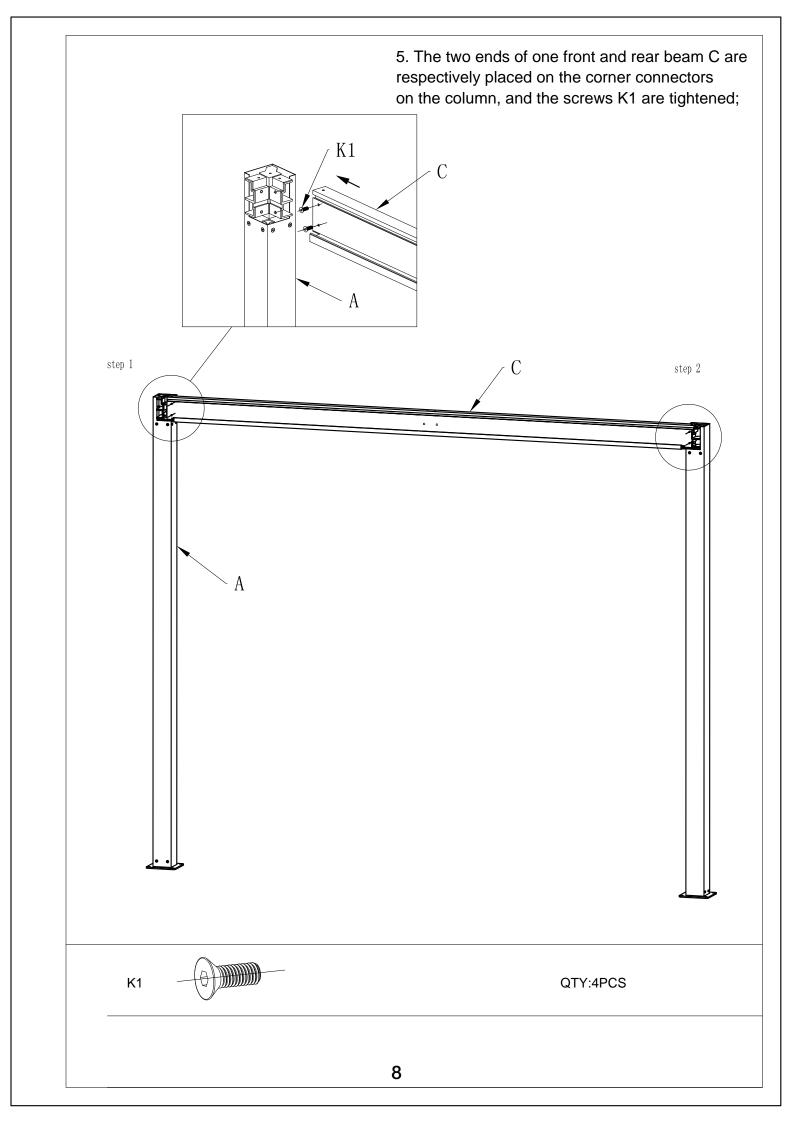


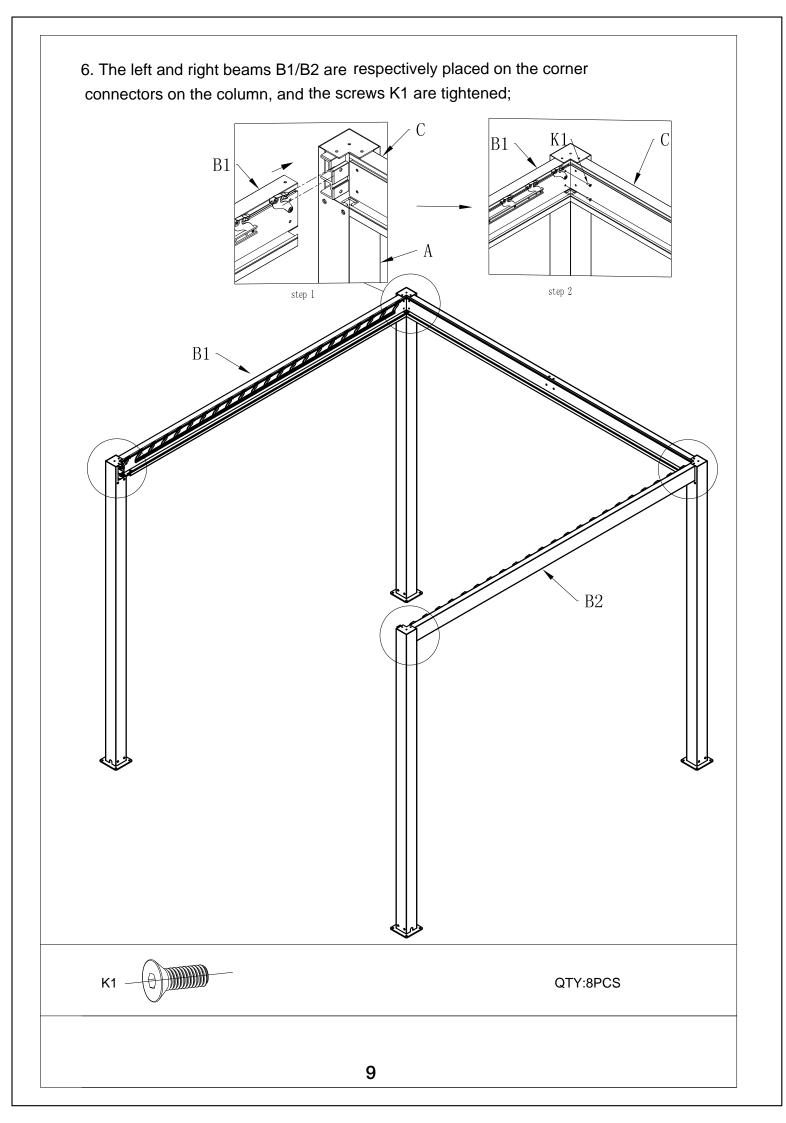


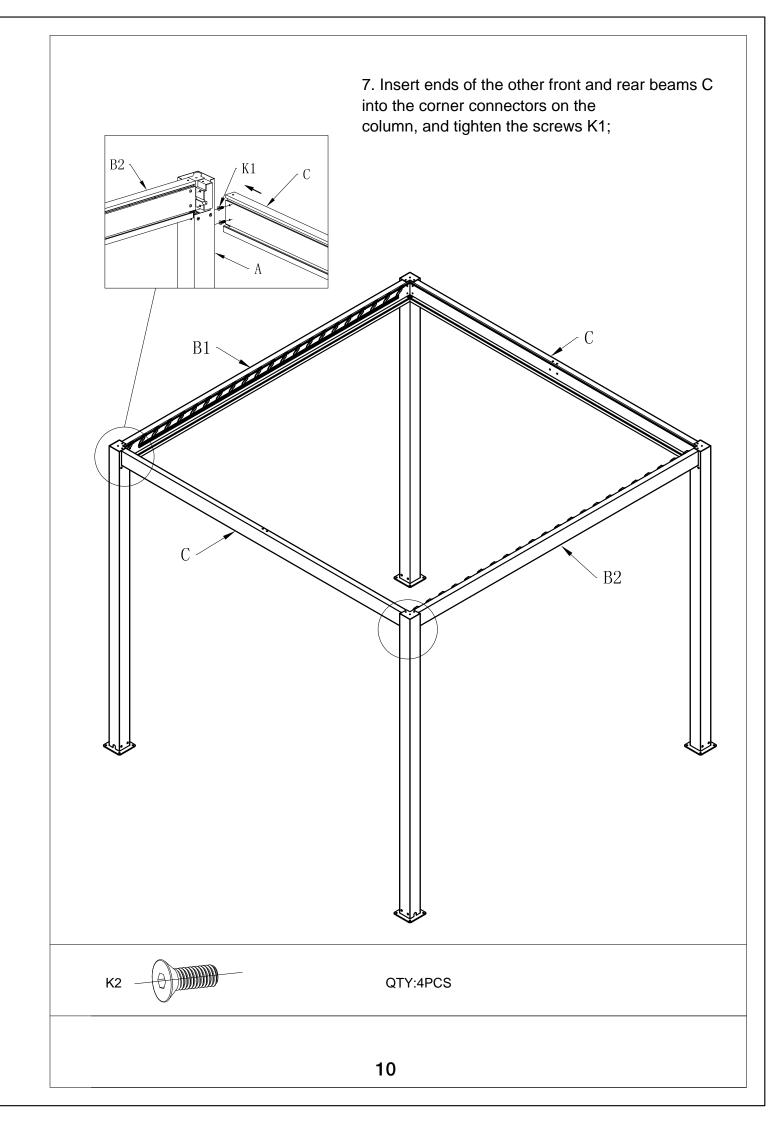


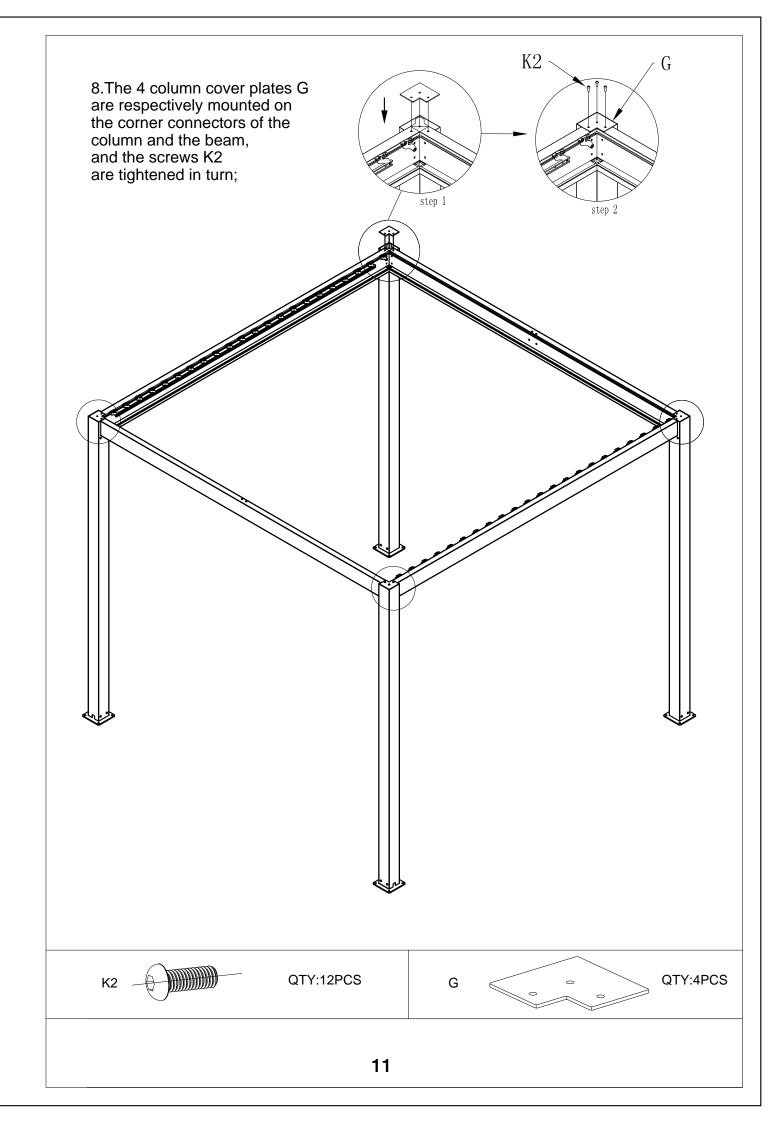


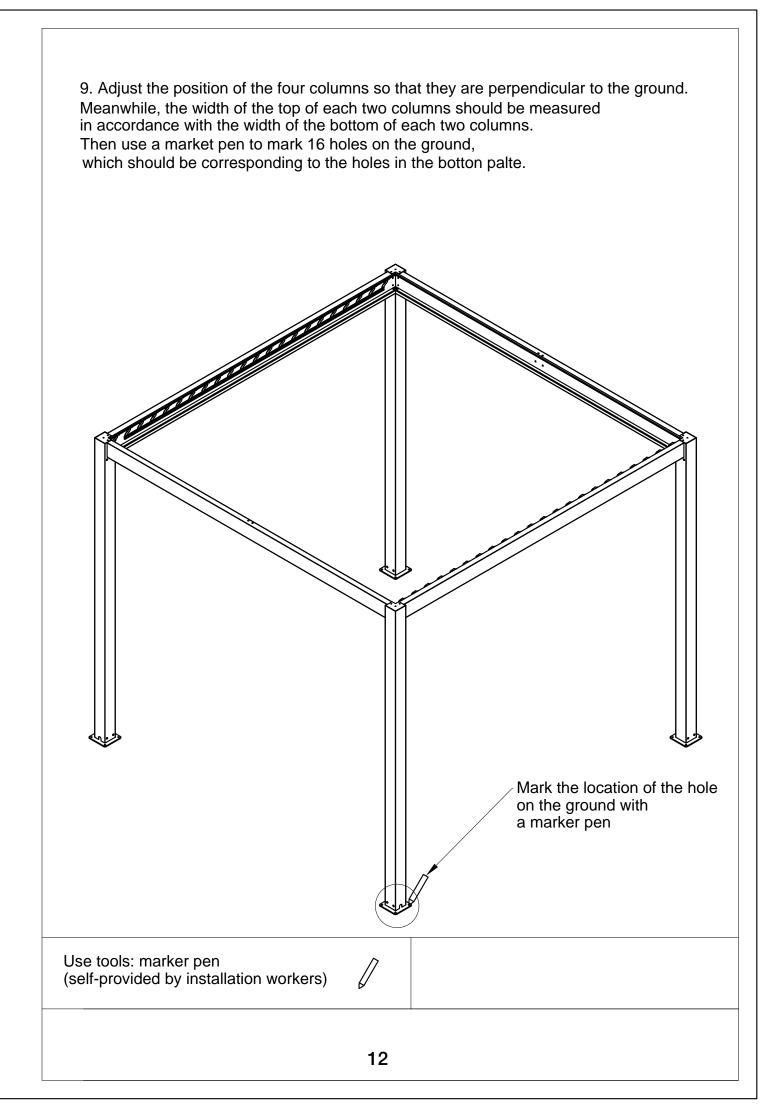


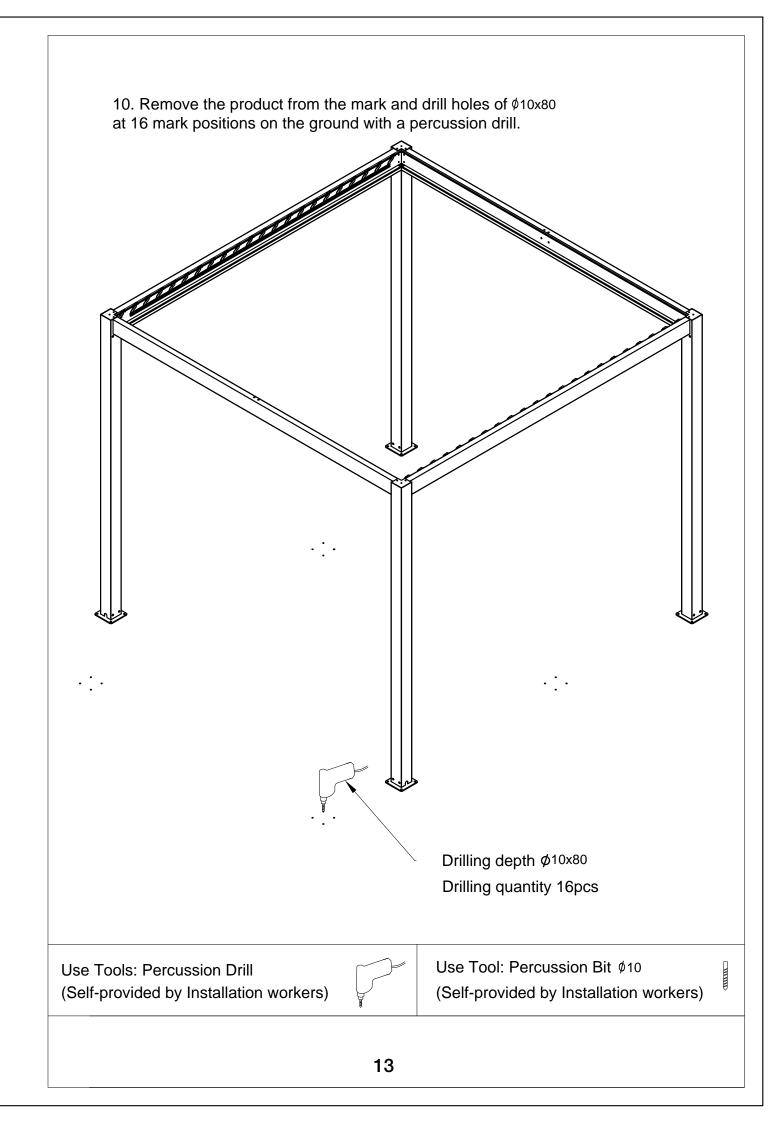


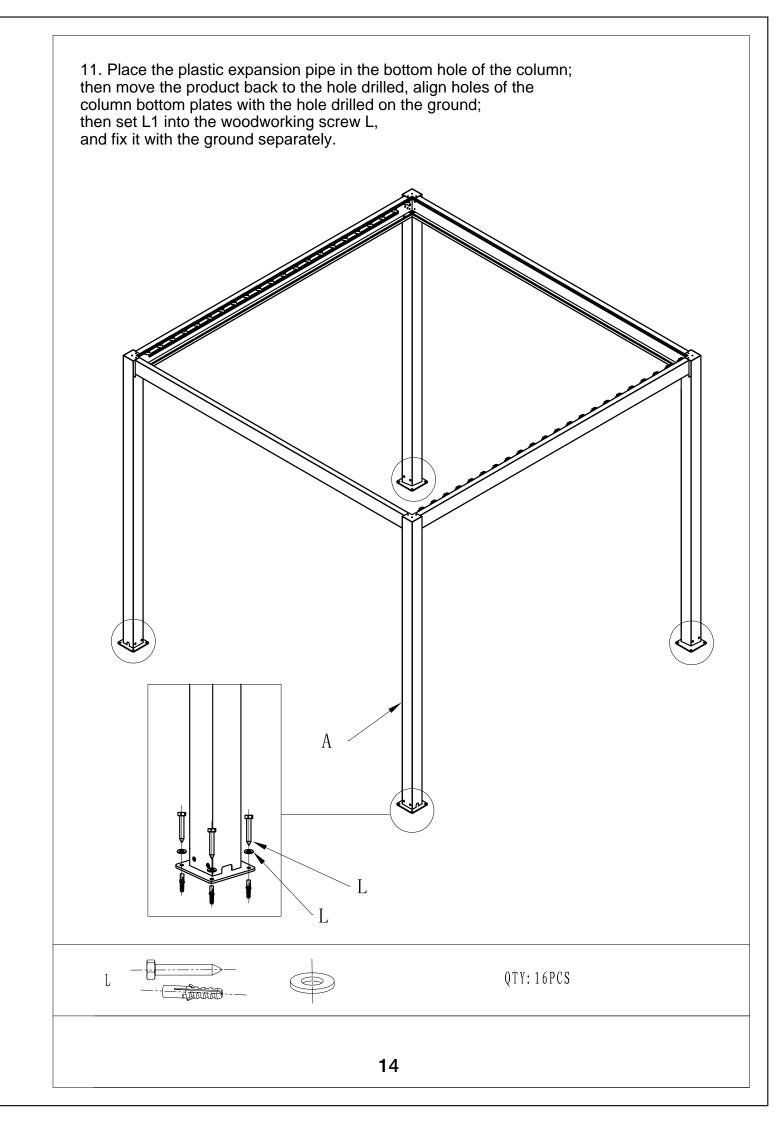


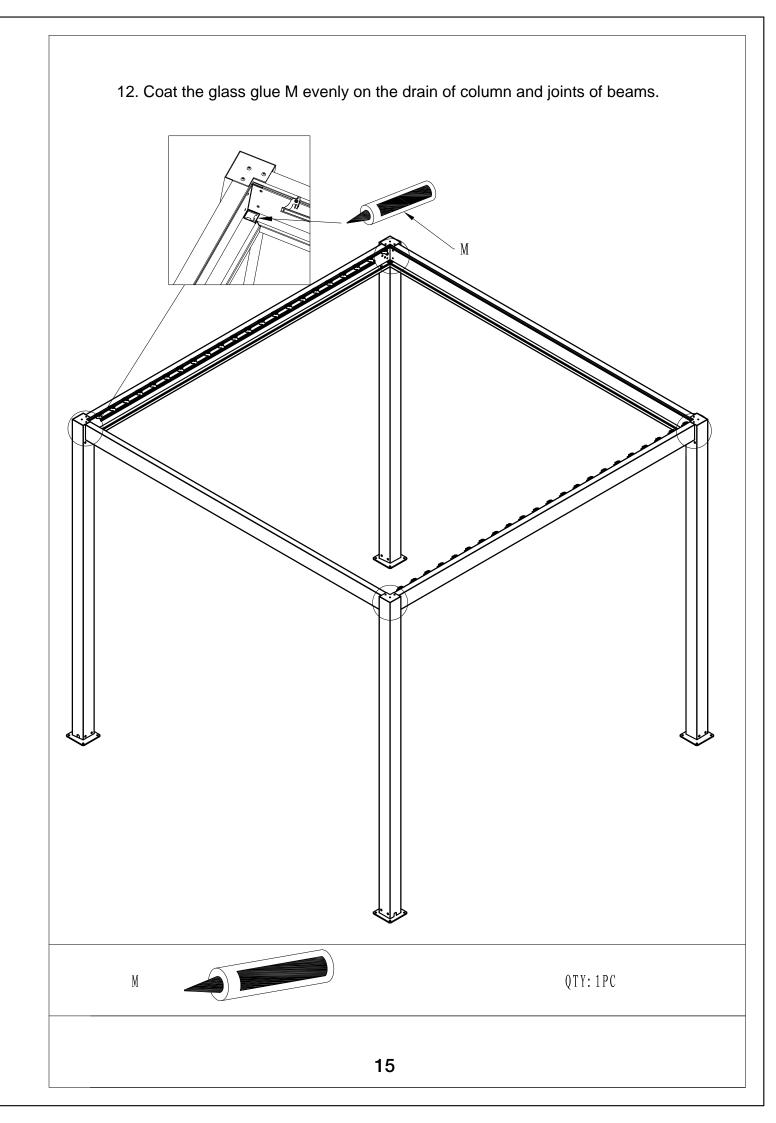


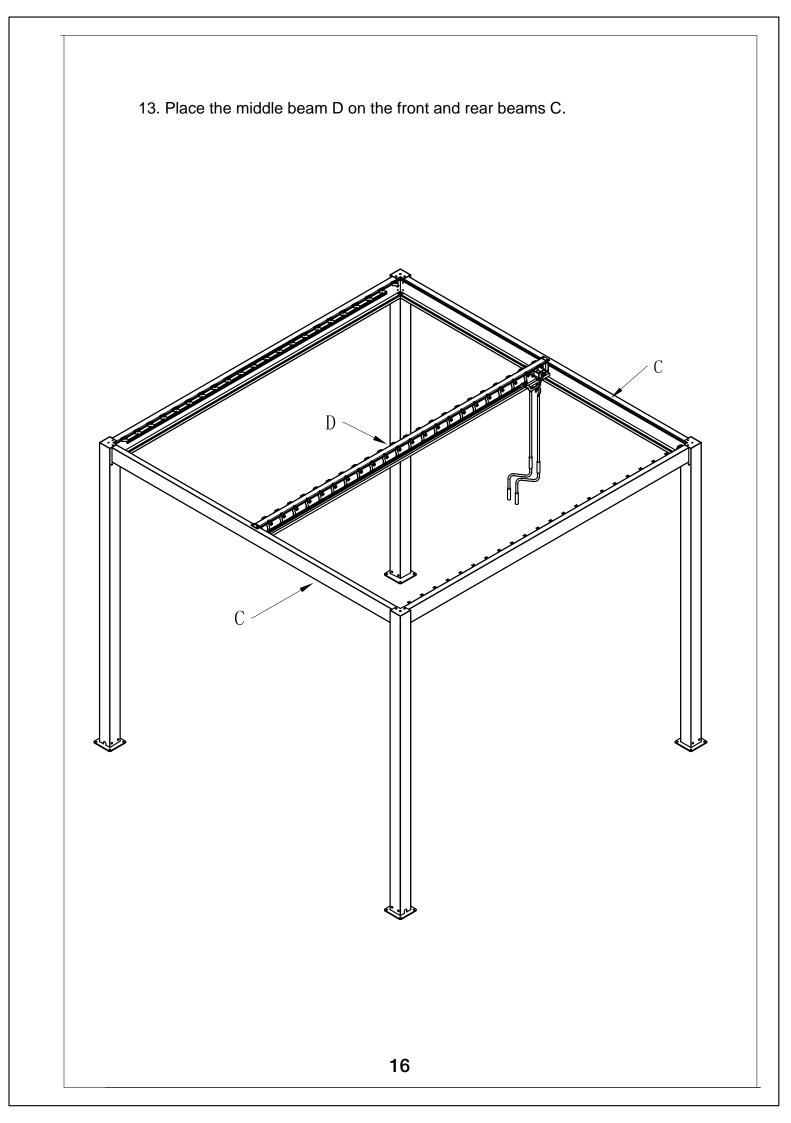


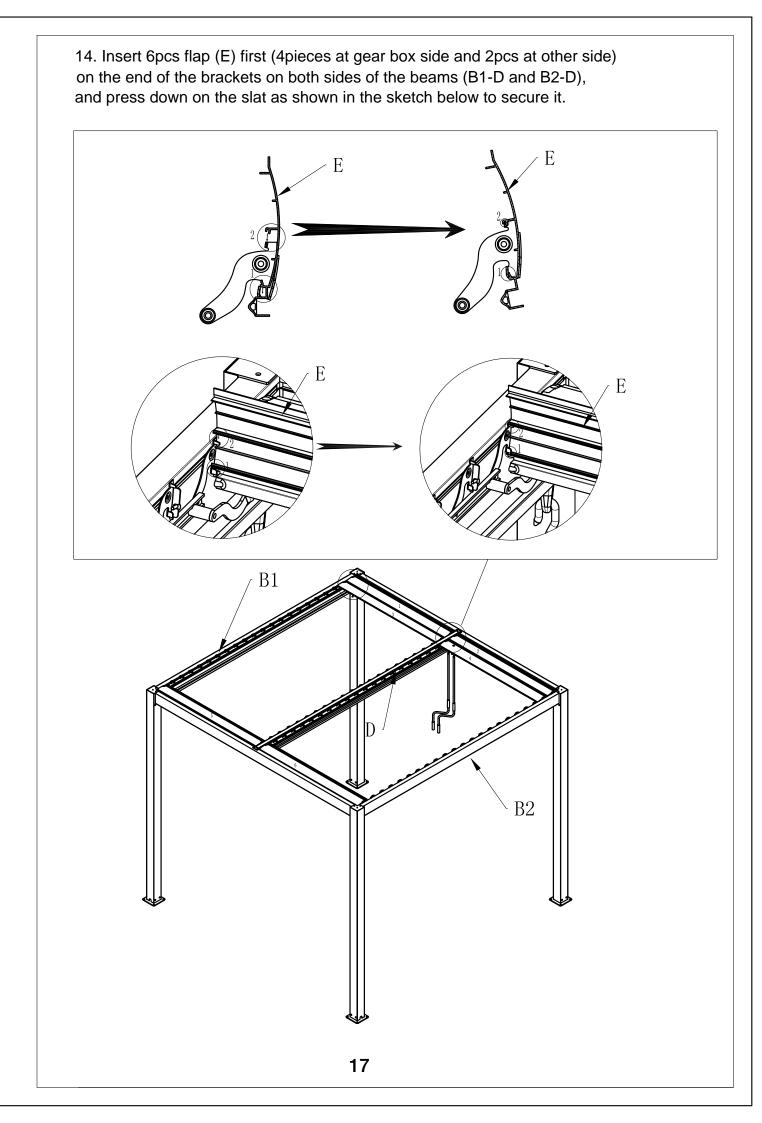

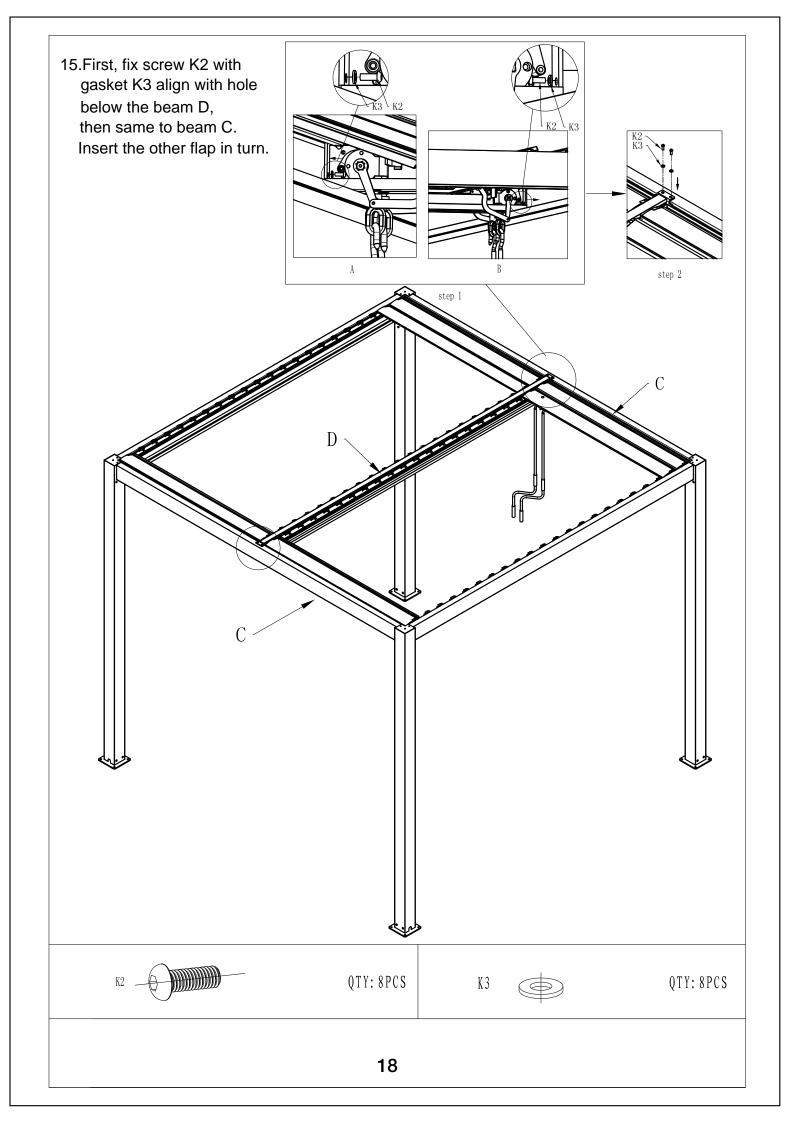

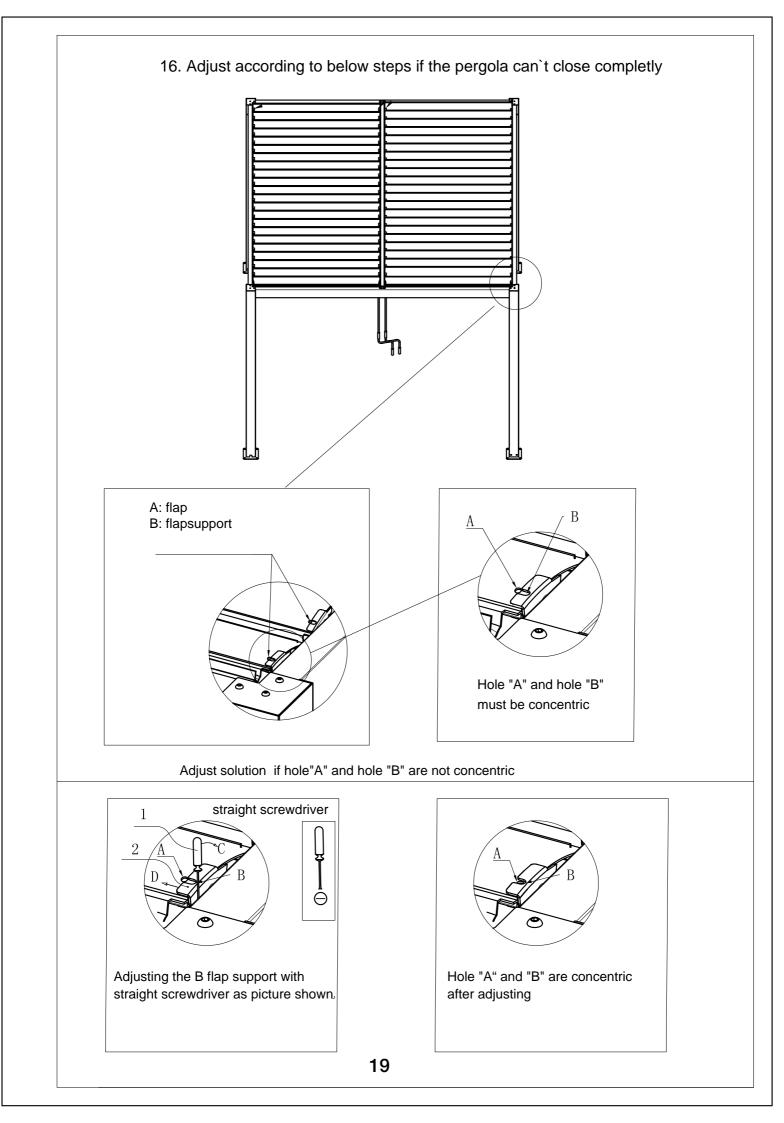

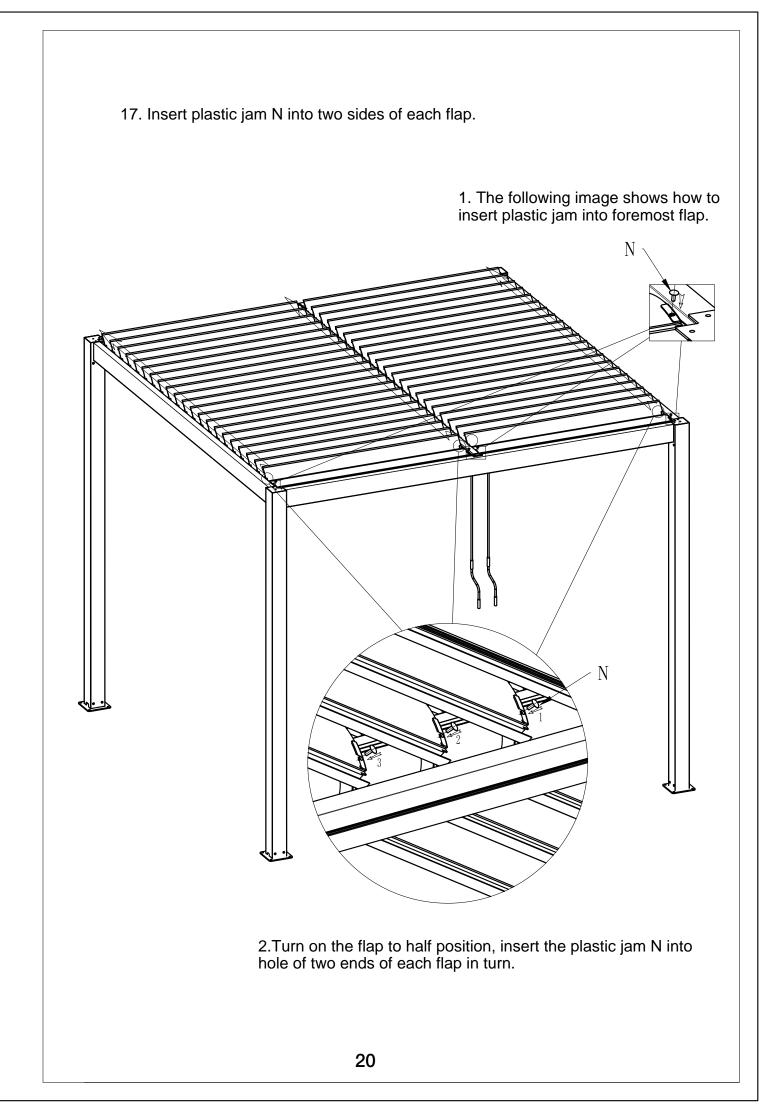

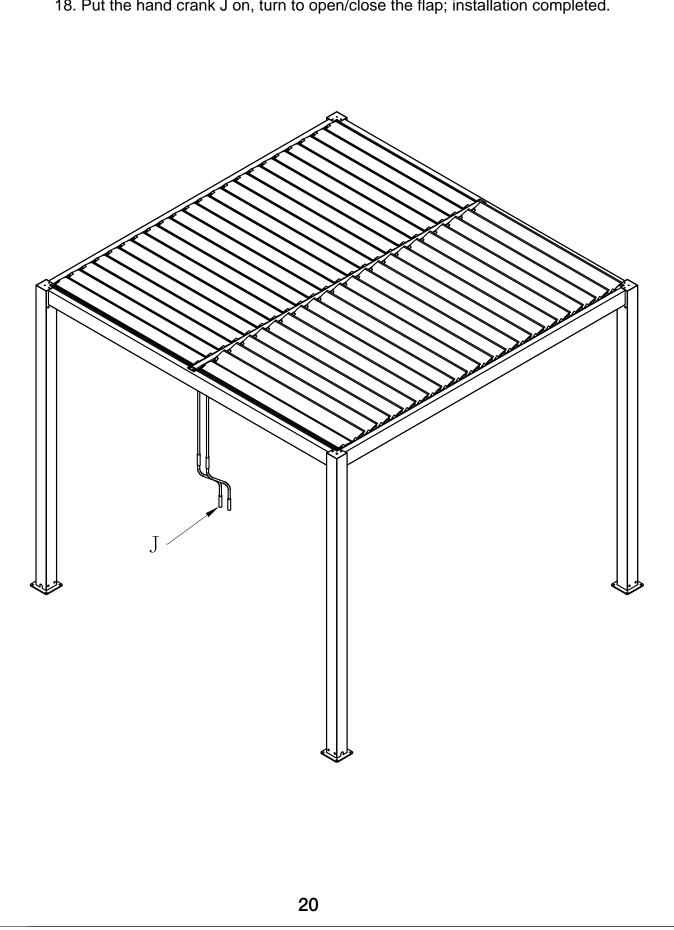

18. Put the hand crank J on, turn to open/close the flap; installation completed.

